UNÎNEX

NAKATOMI

KOOLZONE

MOBILE SPOT COOLER

QUICK GUIDE FOR ***SAC-1800***




THANK YOU FOR PURCHASING THE KOOLZONE MOBILE SPOT COOLER.
PLEASE READ THE INSTRUCTIONS BEFORE USING.
AND PLEASE KEEP THESE INSTRUCTIONS FOR REFERENCE.


UNINEX INTERNATIONAL

5780 SMITHWAY STREET COMMERCE, CA 90040


T. 800-864-3288 / 323-890-9246 / F. 323-890-9249


PARTS OF THE MACHINE

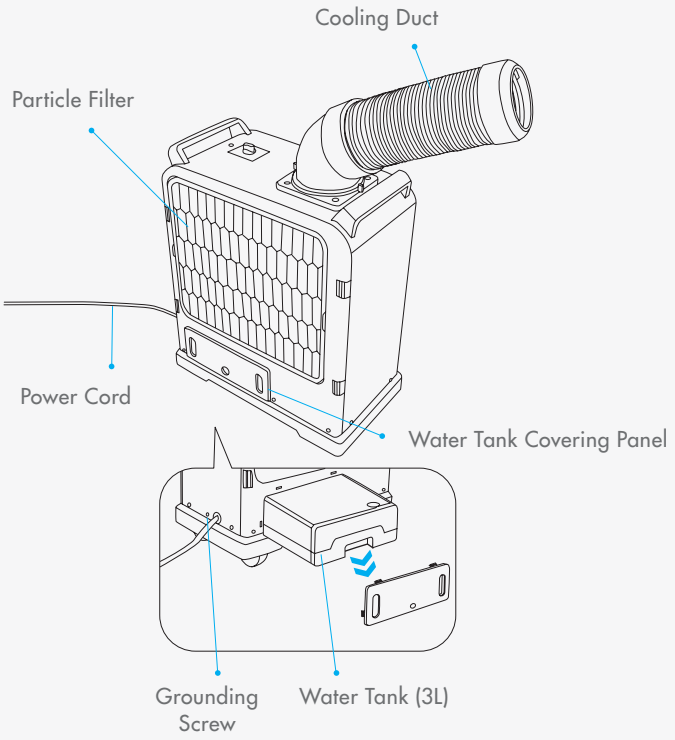

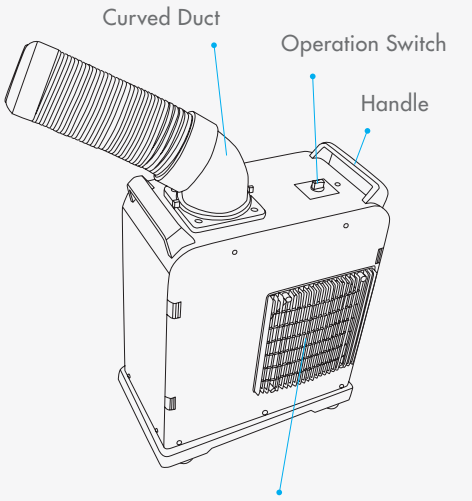

MANUAL - COLD AIR DUCT FITTING

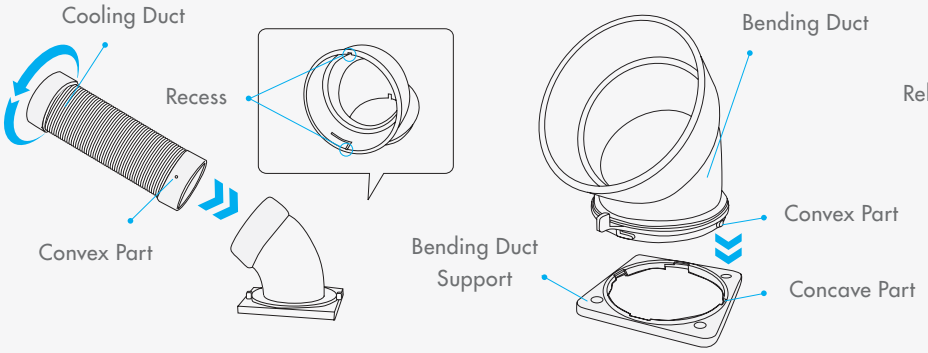


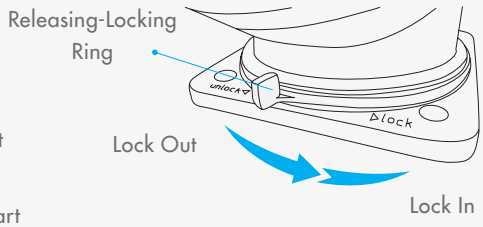


INSTALLATION

1. Installation of the curved duct: Please point the convex part of the bending duct to the concave part of the bending base and insert it, the rotate the releasing-locking ring to fix the bending duct.
2. Installation of the cooling duct: Slide the fringe of cooling duct to the slot of curve duct, then turn the cooling duct clockwise to lock. Please make sure the joint is connected well before use.


IMPORTANT - KEEP DISTANCE

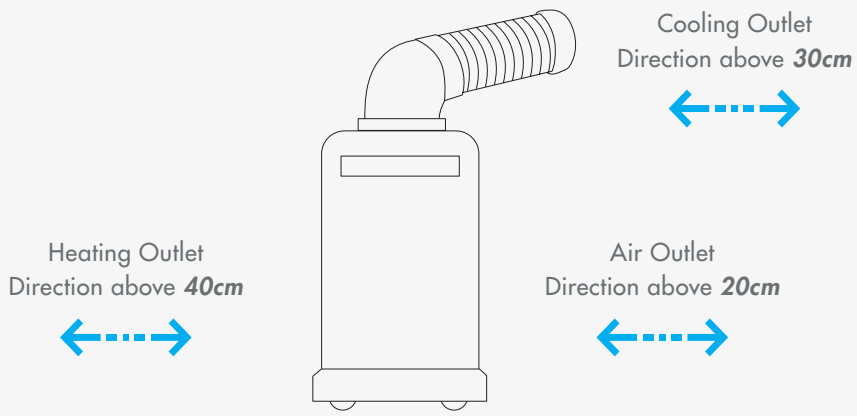


TURN THE SPOT COOLER ON / DIRECTION ADJUSTMENT

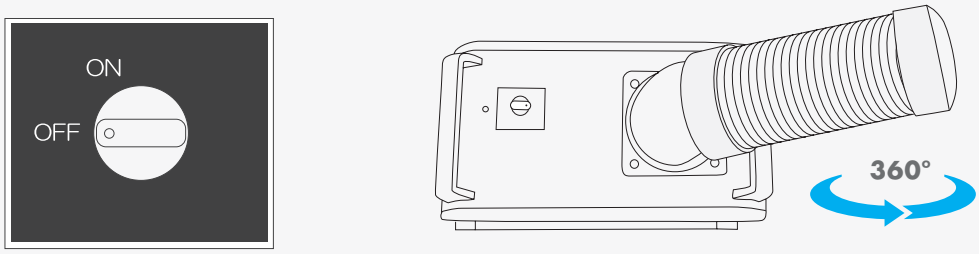

DRAIN TANK

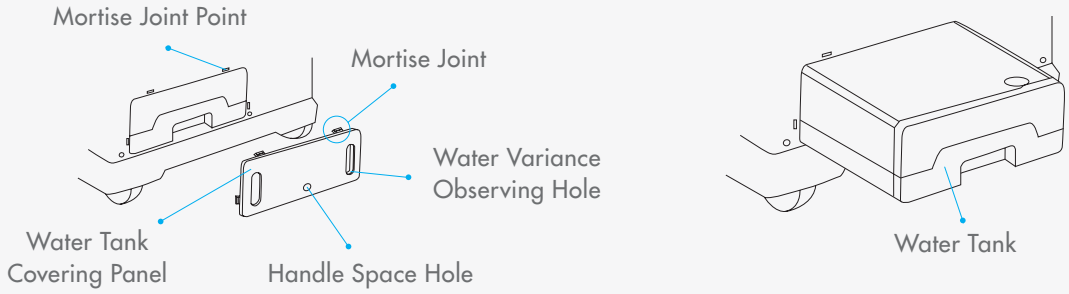

KOOLZONE MANUFACTURER'S RECOMMENDATIONS

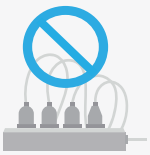

1. USE A DEDICATED OUTLET. DO NOT SHARE AN OUTLET WITH OTHER DEVICES.
SHARING AN OUTLET MAY CAUSE A POWER CUT.



2. USING AN EXTENSION CORD IS NOT RECOMMENDED.
IF AN EXTENSION CORD IS NEEDED, USE 12 AWG OR THICKER GAUGE.



3. DO NOT BLOCK THE HEAT EXHAUST OUTLET.
(DO NOT PLACE SAC1800 TOO CLOSE TO THE WALL.)
IT MAY BLOCK THE HEAT OUTLET AND CAUSE THE SPOT COOLER TO
STOP WORKING PROPERLY.



4. FOR OPTIMUM PERFORMANCE, USE ONLY UP TO A MAXIMUM OF
12 FT OF HEAT/COOL EXTENSION DUCT.



PLEASE NOTE

OPTIMUM OPERATING TEMPERATURE RANGE FOR

KOOLZONE MOBILE SPOT A/C COOLER

IS FROM ***64 - 104°*** FAHRENHEIT.

PROPER USAGE OF THIS UNIT, AT THE COOLING DUCT,

WILL REDUCE THE AMBIENT TEMPERATURE

BETWEEN ***10 - 15°*** FAHRENHEIT.

MAKE LIFE SIMPLE AND MORE CONVENIENT
WITH UNINEX

SCAN ME

CONTACT US FOR PURCHASE OR RENTAL

UNÎNEX

EXCLUSIVELY DISTRIBUTED BY:
UNINEX INTERNATIONAL
5780 SMITHWAY STREET COMMERCE, CA 90040
T. 800-864-3288 / 323-890-9246 / F. 323-890-9249

NAKATOMI

MANUFACTURE:
NAKATOMI CO.,LTD.
6445-2, TAKAI, TAKAYAMA, KAMITAKAI, NAGANO, JAPAN